

PINWOODFER

Copyright © 2019-2023 SubDude Audio LLC, Idaho, USA. All Rights Reserved. Reproduction, transmission or redistribution of this document or its contents without written permission is prohibited.

Take your time, follow the instructions, relax, and enjoy yourself!

WARNINGS: Perform installation with your pinball machine turned off and unplugged from AC power.



PinWoofers Ground Loop Isolator Instructions

Ground Loop Isolator


- The ground loop isolator kit includes i) 6in TRS Male to TRS Male Cable, ii) Ground Loop Isolator Block.
- Shown to the right.



PiNWOODFER

Ground Loop Isolator

- Shown is a typical connection to a PinWoofers Spike-2 Line Out Board.
- If you have a difference source, locate the output jack (shown as item 4 in the photo to the right). The approach is the same.
 - a. Unplug [1] from the source jack [4].
 - b. Plug [1] into [2].
 - c. Plug [3] into the other side of [2].
 - d. Plug [3] into [4].

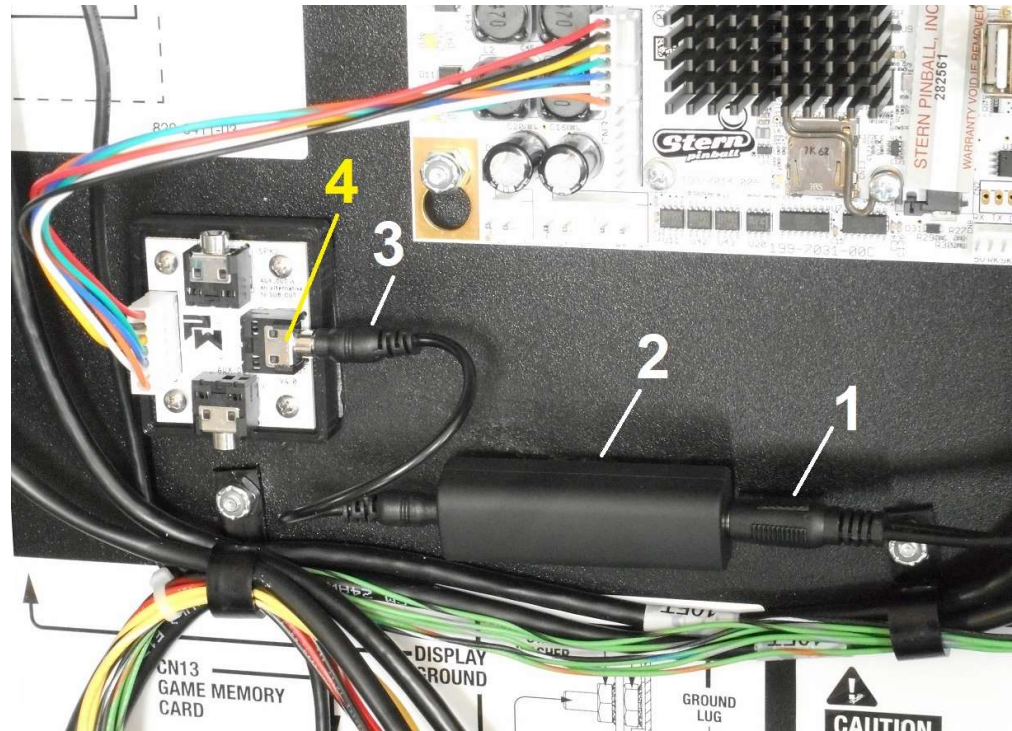

PINWOOFER

FINWOODSER

You Have Now Installed Your Ground Loop Isolator