



**Copyright © 2019-2023 SubDude Audio LLC, Idaho, USA. All Rights Reserved. Reproduction, transmission or redistribution of this document or its contents without written permission is prohibited.**

**Take your time, follow the instructions, relax, and enjoy yourself!**

**WARNINGS: Perform installation with your pinball machine turned off and unplugged from AC power.**




## **PixelWav LED Controller Instructions**

## Overview

- 5V Operation Only
- RF Wireless
- Power Off Memory
- 15m Range
- 146 Build in Programs / Effects
- White Plus 6 Preset Static Colors:  
Red / Green / Blue / Yellow / Cyan / Purple



Remote

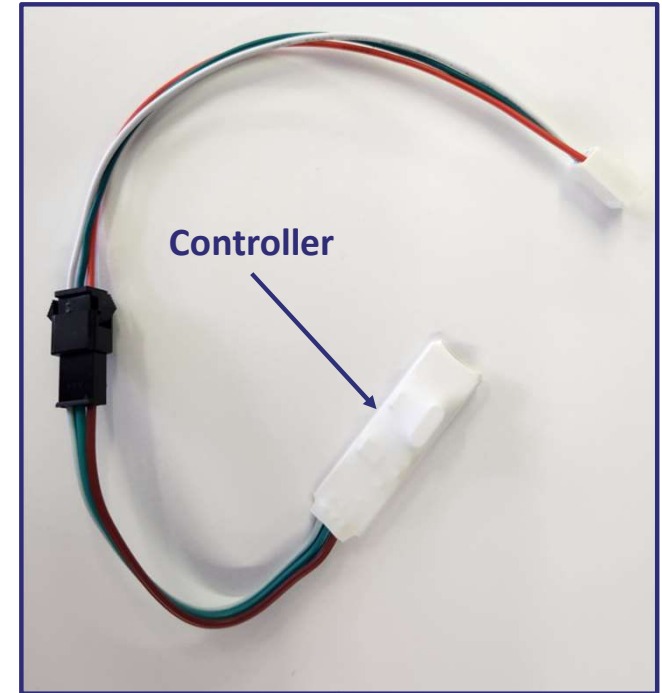

Controller

Controller Dongle


FIXLWNV

# Controller Display Options

- **Stored Patterns:**
  - **Mode Entry:** Press Auto.
  - **Options:** Up / Down Mode, Up / Down Speed.
  - **Mode Exit:** Controller Functions or White Plus Preset Colors
- **Static Colors:**
  - **Mode Entry:** Press desired color.
  - **Options:** white / red / green / blue / purple / yellow / cyan / purple
  - **Mode Exit:** Controller Functions or Stored Patterns.

## Controller Functions

- **Remote Pairing to Controller:**
  - **Mode Entry:** Press Match Button continuously until LEDs flash white.
  - **Description:** Pair remote to controller.
  - **Mode Exit:** Release Match Button.
  - (When pairing more than one controller in your area, remove power from all others except the unit you are actively pairing.)
- **LED Test Function:**
  - **Description:** Cycle through white / red / green / blue / purple / yellow / cyan / purple repeatedly.
  - **Mode Entry:** Press Auto Button continuously until LEDs turn red. Quickly release Auto Button to enter mode.
  - **Mode Exit:** press Auto button.

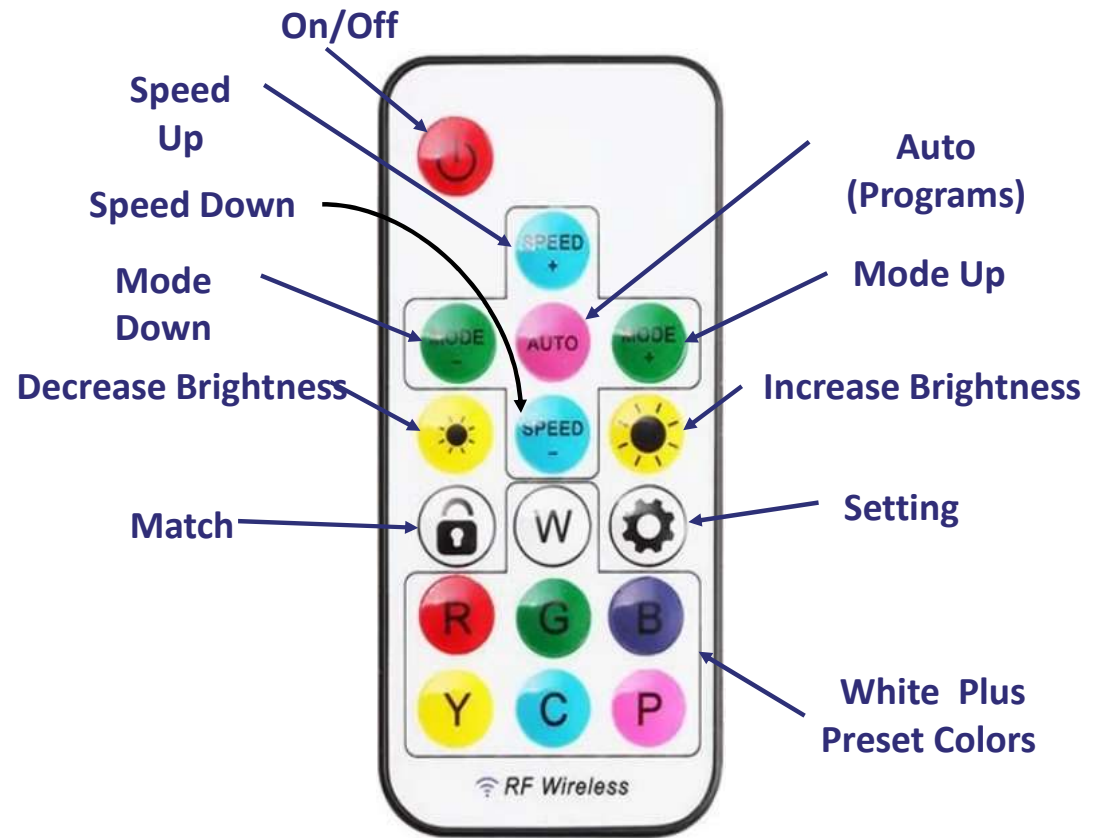

PIXLWNV



**End of Document**