
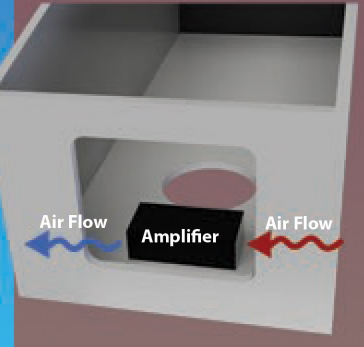


1 PinWoofers Harness - EJJP

- Unplug the machine from AC Power.
- Open the Coin Door.
- Remove the Playfield Glass.
- Lift the Playfield up and securely prop it open.
- Feed the Amplifier End of the PinWoofers Harness down the right side through the Coin Door opening.

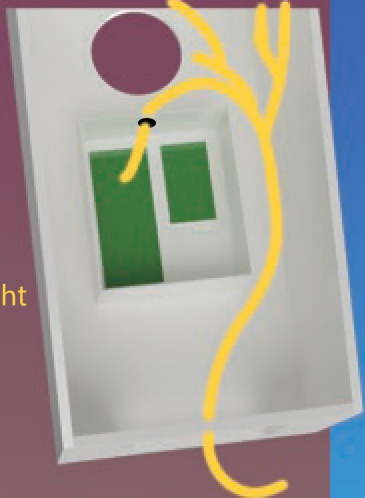


Remove coin box and replace it with the amplifier resting as shown, for safety. **DO NOT** use a mounting bracket to mount the amplifier vertically or to a cabinet wall. The amp enclosure is designed to have airflow underneath to reduce heat and prolong service life.

20200822 V4


2 PinWoofers Power Board

- Remove the top from the large aluminum enclosure in the cabinet.
- Unplug the 10-Pin Factory Connector from J110 on the I/O PCB Assy. (Your title may or may not have this factory Connector.)
- Plug the 10-Pin Factory Connector into the Power Board. (If applicable.)
- Feed the PinWoofers Harness 2-Pin Power Connector (with red and black wire) through the hole at the rear of the aluminum enclosure.
- Plug the 2-Pin Power Connector into the Power Board.
- Plug the Power Board into J110.
- Connect the Ground Wire to a nearby enclosure ground screw location.

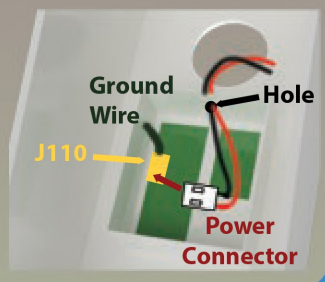


3 PinWoofers Expander Board

- Unplug Factory RCA Speaker Connectors J6/J7/J8 from the back of the Aluminum Enclosure.
- Plug the corresponding Expander Board connections into J6/J7/J8 as shown. It is critical that the red/black plug into the top female RCA J8. Below that, the white/black J6. At the bottom the green/black J7.
- Plug the PinWoofers Harness 3.5mm TRS Plug into the Expander Board.
- Mount Expander Board with magnetic base (or tape) near the Aluminum Enclosure.

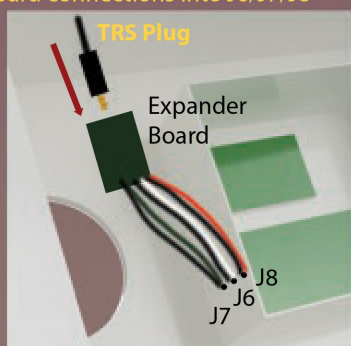

4 Connections

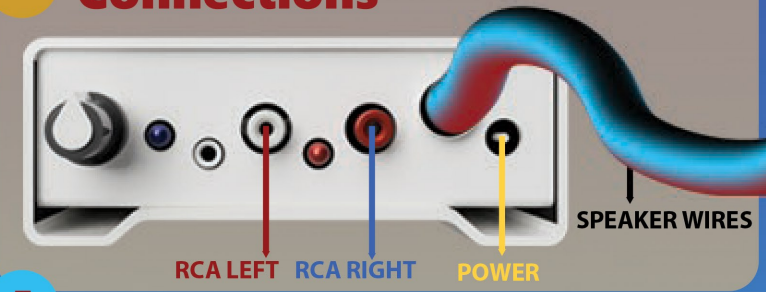


5 Connect Speakers




Plug the PinWoofers Speaker Connectors into the Machine Speaker Connectors.

6 Connect Cabinet Speaker

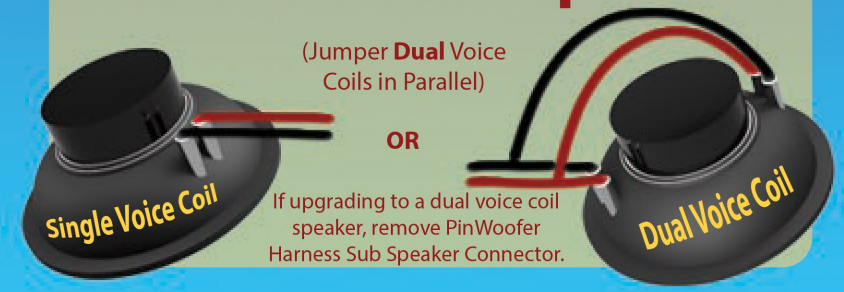

AMPLIFIER OVERVIEW

When auto-mute is enabled the LED auto-mute indicator will glow red. Note that auto-mute may remain enabled during machine menu navigation, and navigation sounds will be quieter than before.

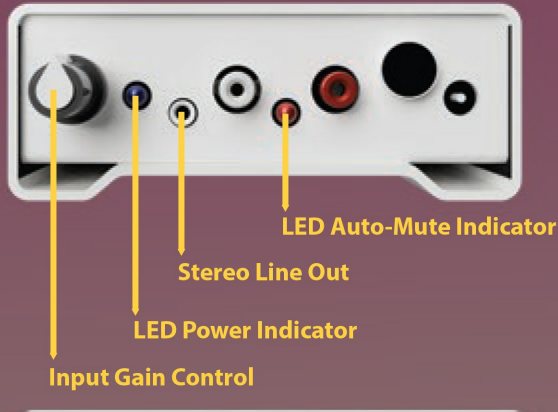

20200822 V4

ADJUSTMENTS

After installation, turn the machine on and follow the below startup procedure:

1. In the machine's menu set all audio settings to default:
Volume = 25 (Below settings defaults will be shown in green.)
FULL MENU > SETTINGS > SYSTEM SETTINGS > SOUND
2. Exit machine's menu.
3. Turn all amplifier dials to point vertically as shown.
4. Adjust amplifier controls either by starting a game, or by alternating up and down the coin door volume controls (to keep the sounds consistently playing).
5. It's likely that the starting amplifier control positions from 3. above will not be optimized, and may sound poor. Be confident in rotating the different controls to whatever position sounds good to you.
6. **Adjust at a safe volume level.** Your final adjustments may leave the dials in radically different positions. This is perfectly fine, as long as you've achieved your desired results.
7. **CRITICAL:** If the master volume of the machine and/or the gain control on the amp are too low, the auto-mute will clamp the output and reduce the volume. (The auto-mute function may even alternate on/off.) Watching the auto-mute LED will inform you of this condition. Correct by simply increasing the machine's volume and/or the amplifier's gain control.
8. It is recommended that the Gain is adjusted to 50-75% clockwise, and the volume of the title is adjusted to about one half (25-30). These adjustments will provide a strong input signal and margin for the auto-mute function. **Never set title volume above 40.**
9. As needed, return to the machine's menu to fine-tune. It is often helpful to reduce the "Speech Mix" setting in the SOUND menu to minimize the boomy resonance of male call-outs. Increased "Music Mix" and "FX Mix" are also options.

PINWOOFERS

Early JJP Installation Guide



PinWoofers.com

Copyright 2020 Subdude Audio LLC, All Rights Reserved