



Copyright © SubDude Audio LLC, Idaho, USA. All Rights Reserved. Reproduction, transmission or redistribution of this document or its contents without written permission is prohibited.

Take your time, follow the instructions, relax, and enjoy yourself!

WARNINGS: Perform installation with your pinball machine turned off and unplugged from AC power.



**PixlWav - LED Speaker Light Installation – Stern Spike-2 Dynamic
Speaker Lights**

Installation Video:


<https://www.youtube.com/watch?v=KHJRcwyHgvc>



If you have non-PW or non-PinWoofers speakers (such as the Kenwood KFC-1366), please review the addendum at the end of this document before starting.

Power Box 1


- **Make certain that your machine is unplugged from AC Power.**
- Locate the power box cover found in the lower-right hand side of the backbox.
- Nut 1 does not need to be removed.
- Remove Nut 2.

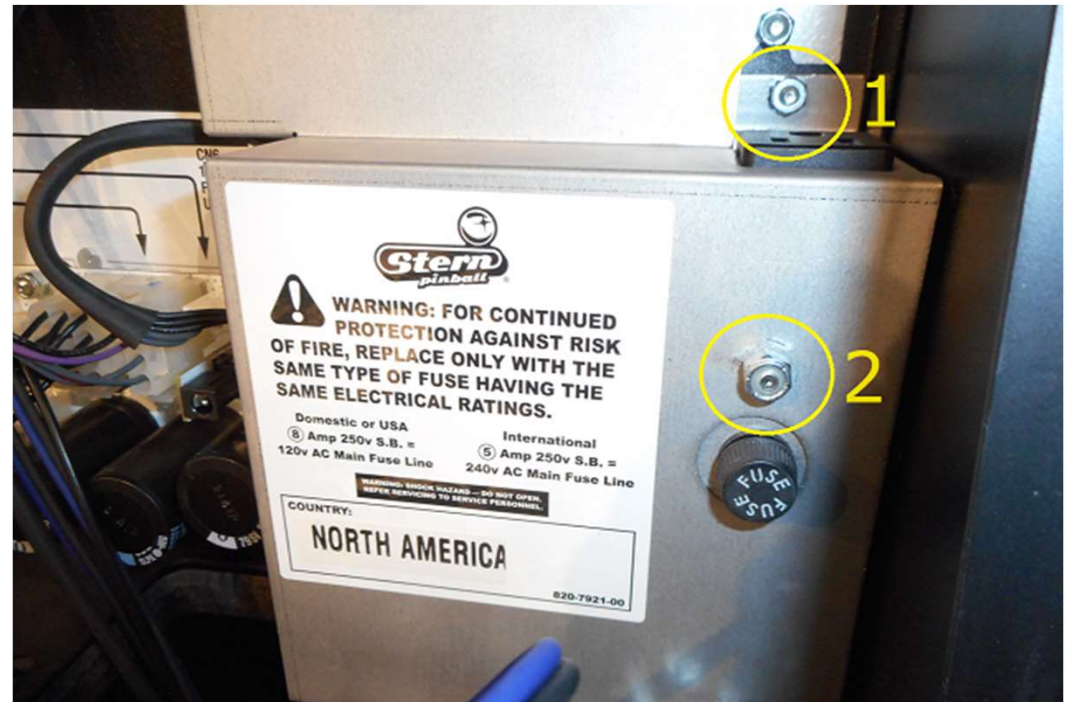

FIXLWNV

Power Box 2


- Remove Nut 3.

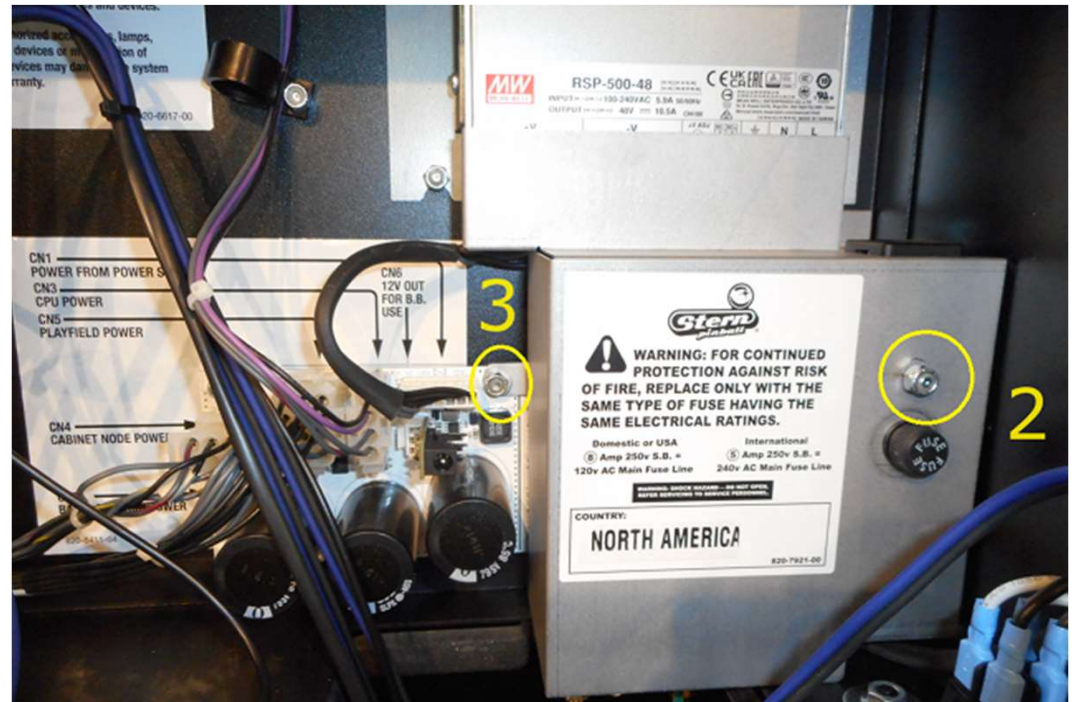

FIXLWNV


110 AC Connector (Bill Validator Power) - 1

- Remove the power box cover.
- Locate the 110 AC Bill Validator Power Connector shown in the yellow circle (United States Only).

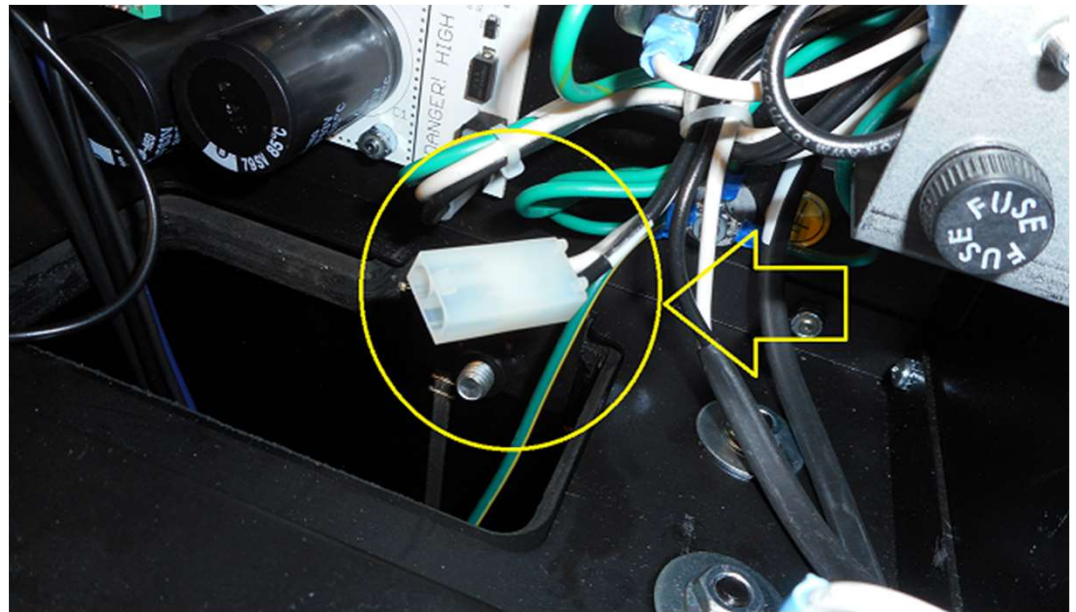


110 AC Connector (Bill Validator Power) - 2

- Plug the supplied 110V AC to 5V DC power adapter as shown.
- Re-install the power box cover at this time.

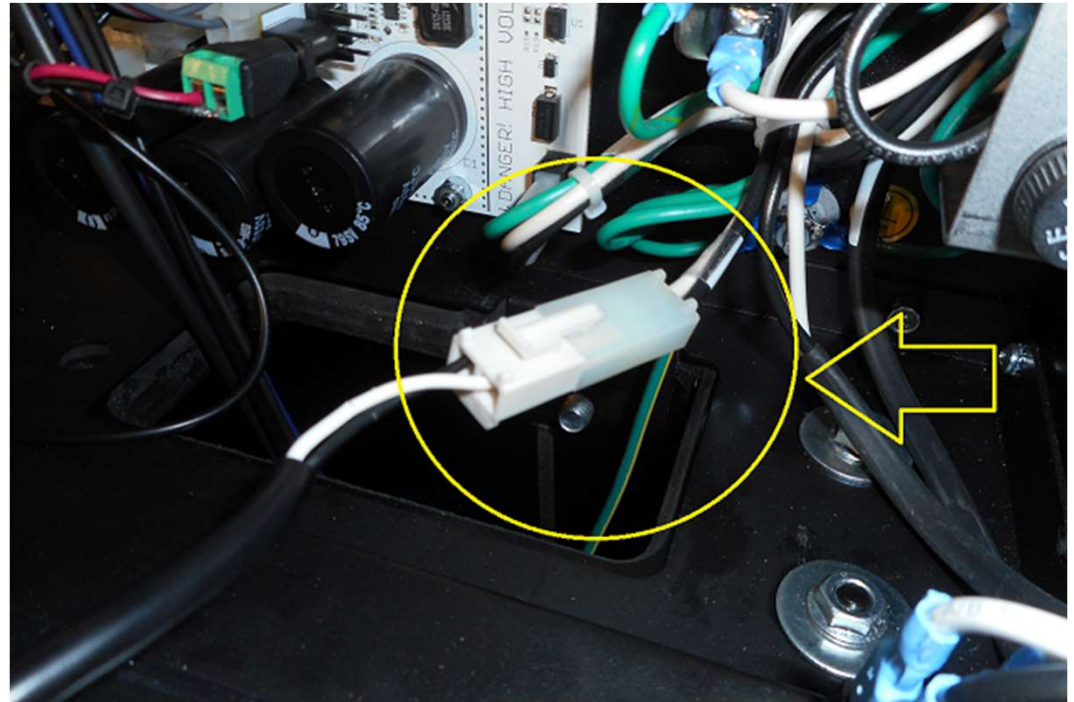

Mount Right Side - 1

- Remove everything that's currently attached to the right-hand side speaker plate as shown.
- You will have 4 exposed studs as pictured.

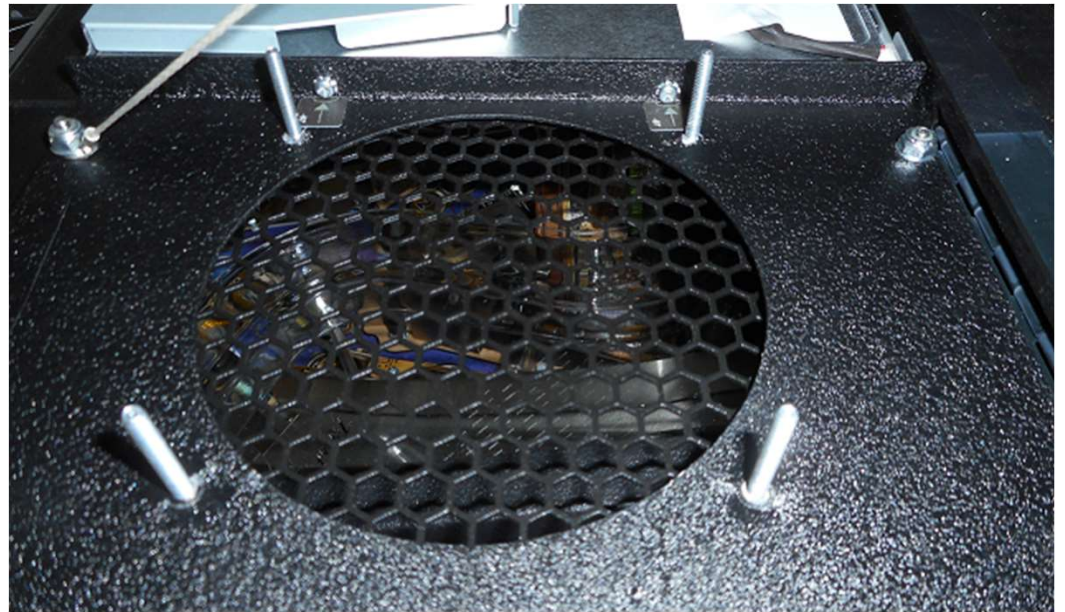

FIXLWNV

Mount Right Side - 2


- Place one of the two supplied mounting rings onto the studs as shown.



FIXLWNV

Mount Right Side - 3

- Place the LED PCB Ring labeled “RIGHT” as shown.
- The tab with the 3-pin electrical connector should rest at the bottom of the speaker plate when the speaker panel has been closed.
- Add flat washers and nuts to secure the PCB and mounting ring as shown.

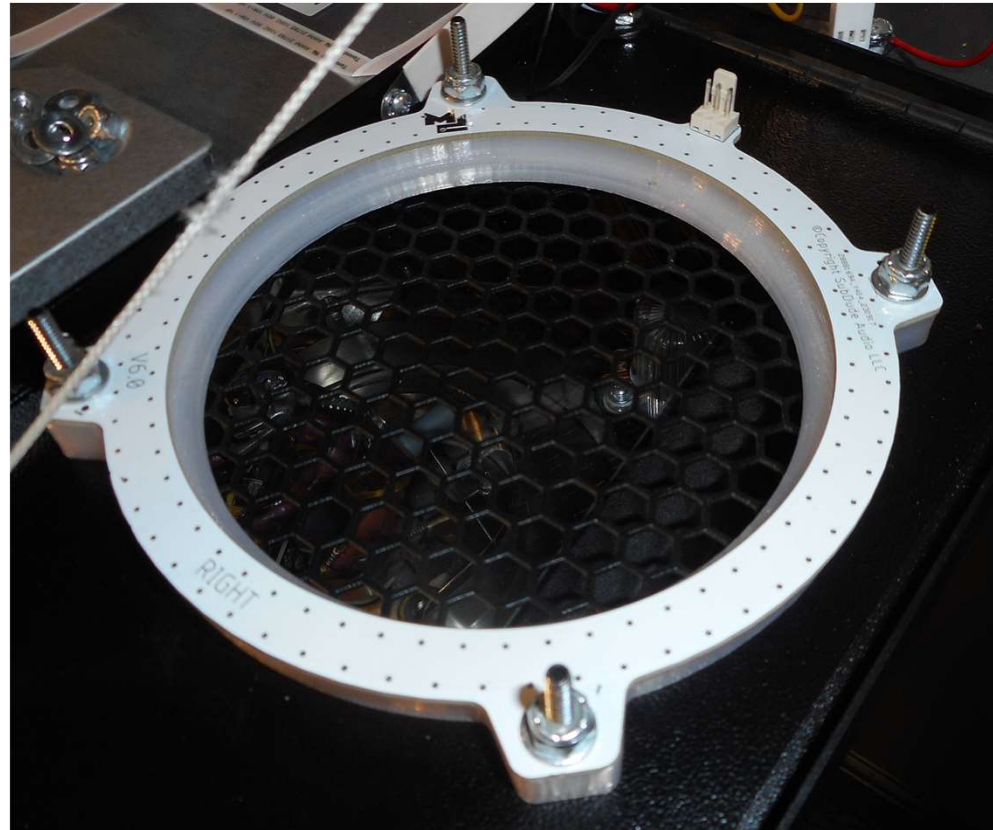

FIXLWNV

Mount Right Side - 4


- Secure the speaker with washers and nuts as shown.



FIXLWNV

Mount Right Side - 5


- Attach one of the two supplied 3-wire connectors to the right-side PCB header as shown.
- Rest / position the other end of this wire connector near the center of the backbox for later connection to the hub CH2 header.
- All connections should have a “natural” fit. Each connector has raised fins that mate to the target header. DO NOT force these connections or you may damage the plastic retainer clips.

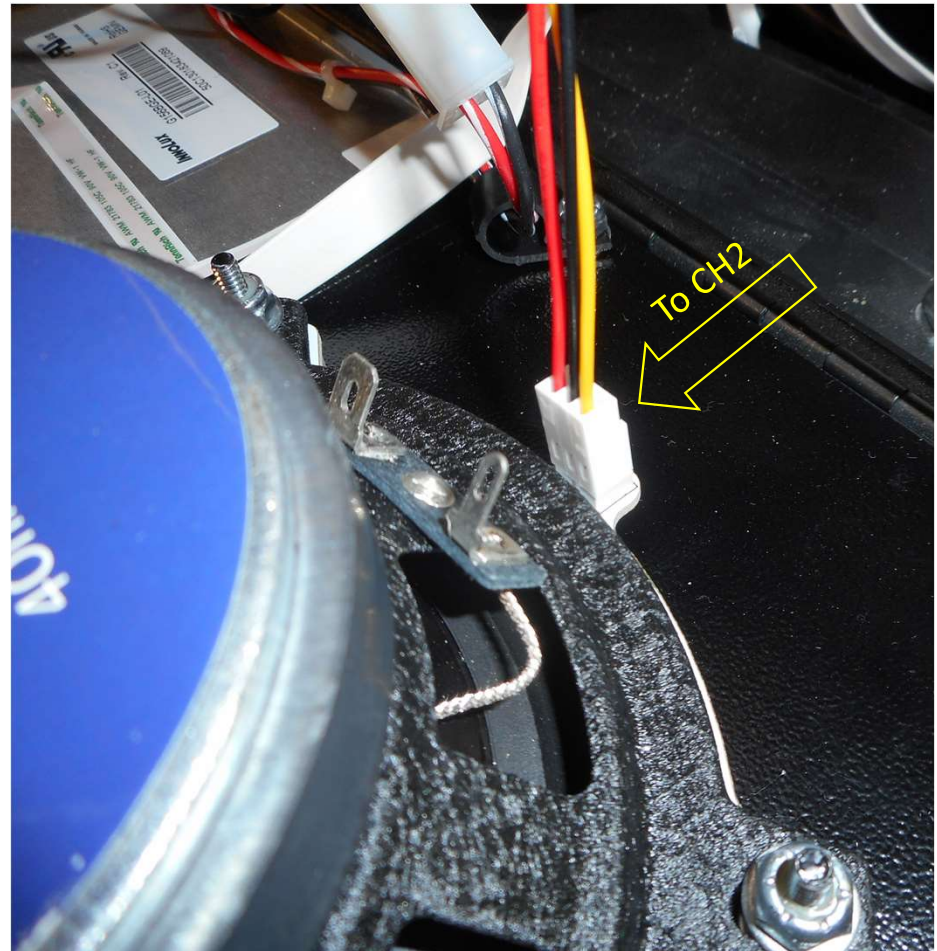

FIXLWNV

Mount Left Side


- Follow the same process to mount the left side.
- Note that the left-side LED PCB is labeled “LEFT”.
- Otherwise, the process is the same.
- Attach one of the two supplied 3-wire connectors to the left-side PCB header as shown.
- Rest / position the other end of this wire connector near the center of the backbox for later connection to the hub CH1 header.
- All connections should have a “natural” fit. Each connector has raised fins that mate to the target header. DO NOT force these connections or you may damage the plastic retainer clips.

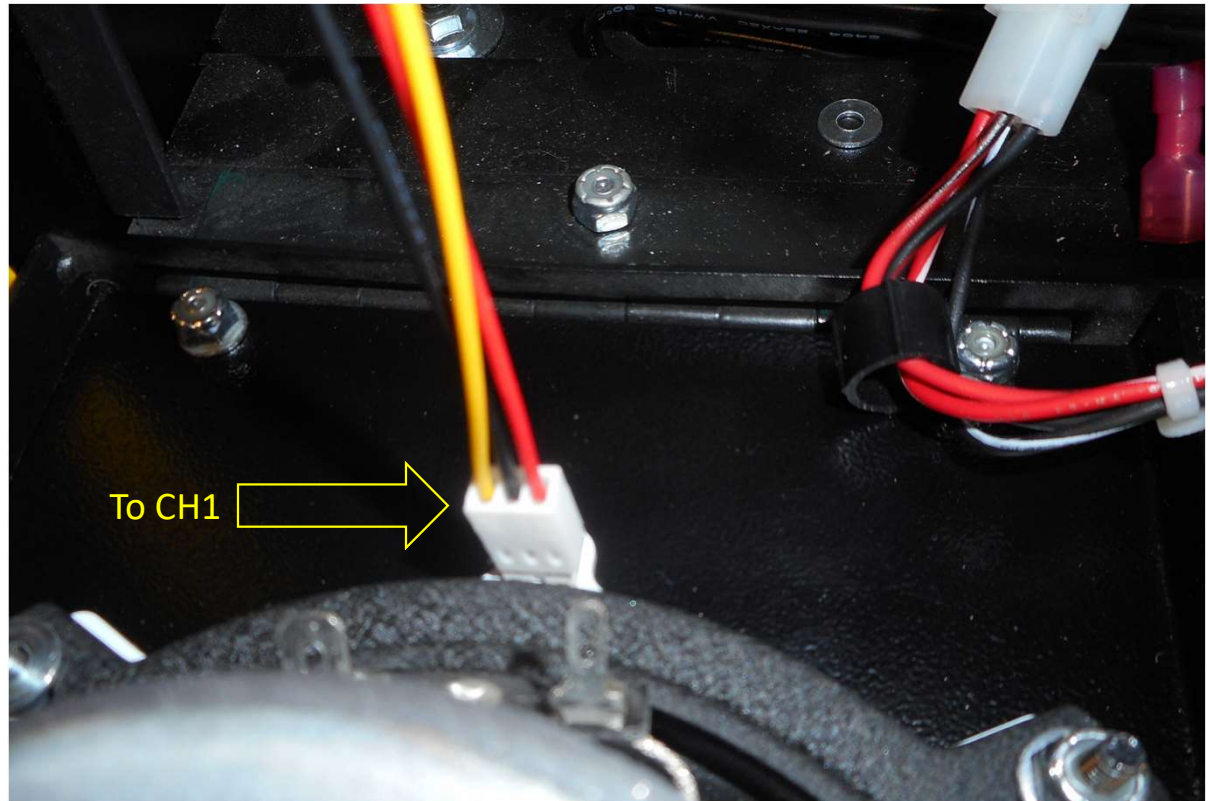

FIXLWNV

Connect Hub


- Connect to CH1 using the cable from the LEFT speaker, as shown.
- Connect to CH2 using the cable from the RIGHT speaker, as shown.
- Move the "SOURCE" switch lever to the "CON" side as shown in the yellow circle.
- Plug the 5V DC Power Plug to the input power jack as shown.
- Plug the controller receiver to the "CON" header as shown.

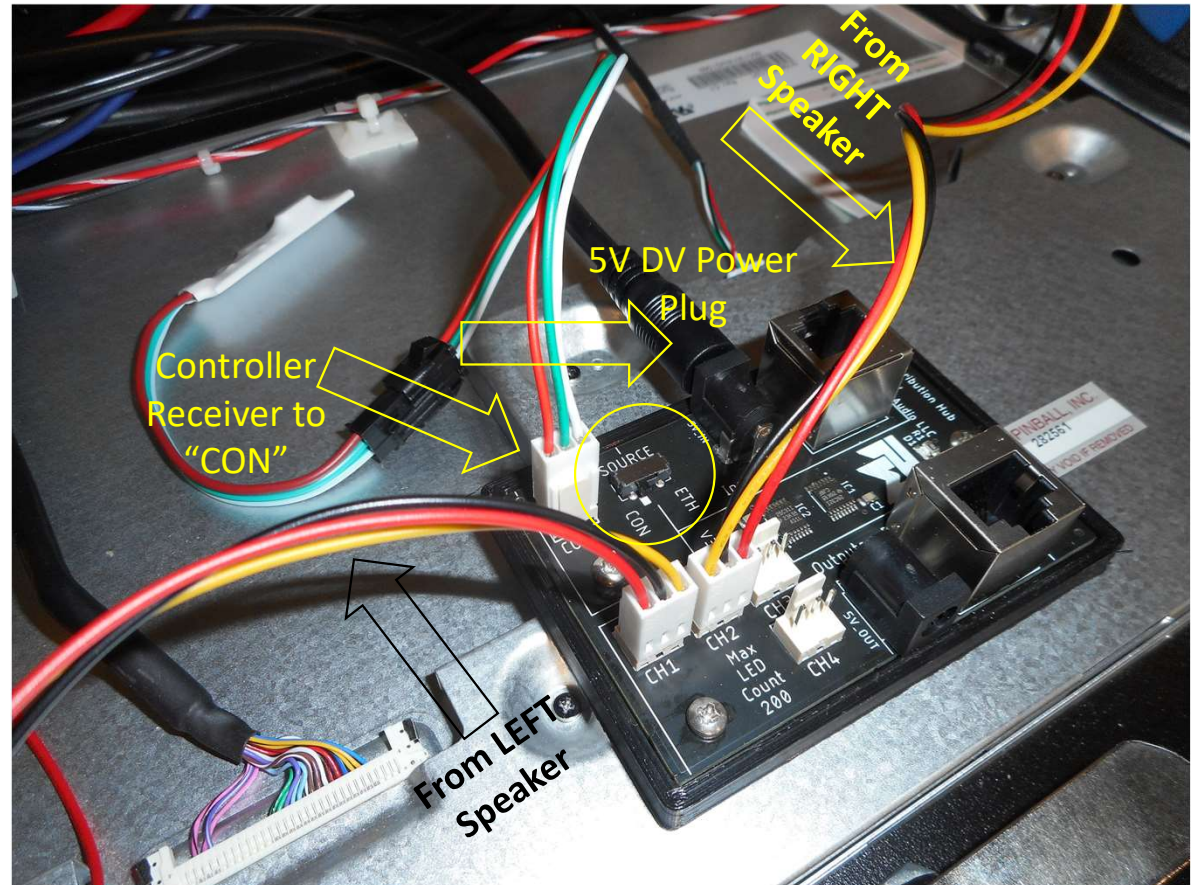

FIXLWNV

Additional Hub Connection

- Expansion for one additional Hub is supported.
- Additional LEDs can be connected using the output of the first hub, and routing to a second, additional hub.

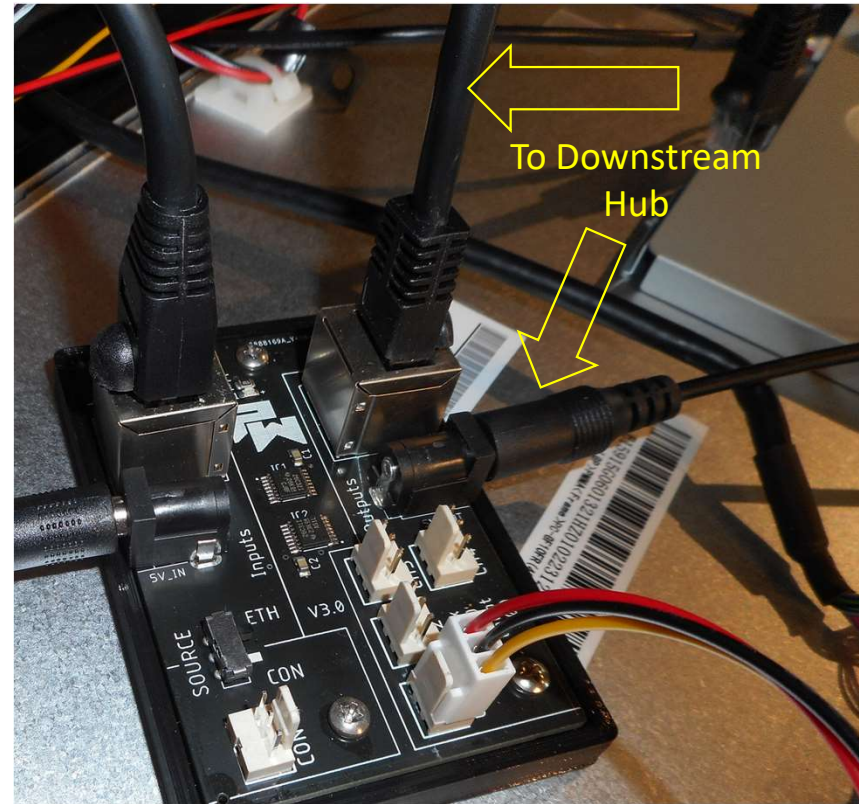



You Have Installed your LED Speaker Lights

Addendum - 1

- Shown to the right is a non-PW / non-PinWoofer speaker.
- For this example, the Kenwood KFC-1366S is used.
- Please read this addendum in its entirety and then return the start of this instructional document.



FIXLWNV

Addendum - 2

- This speaker has no integrated gasket for sealing the speaker to a speaker mount.
- A GAP results from mounting this speaker to the PixlWav Mounting Diffuser hardware.
- A gasket's purpose is to allow a pressure wave to develop between the front and back of the speaker which increase mid-bass levels.
- A missing gasket not only sounds "thin", but the speaker and stack-up can vibrate audibly.
- This condition cannot persist and must be addressed.



PIXLWAV

Addendum - 3

- Pictured to the right is a speaker plate with a stern 5.25in Foam Speaker Gasket.
- This is Stern part #626-5113-00.
- Stern Limited-Edition titles generally have this included as part of the factory supplied speaker panel assembly.
- If you have the Kenwood KFC-1366S (or other speaker without an integrated gasket), utilize your existing gaskets if you have them.
- Otherwise, you will need to purchase two of these before installing this speaker light kit.
- An online search of "Stern 626-5113-00" will yield several outlets.



Addendum - 4

- Secure the speaker over the PixlWav Mounting Diffuser, the supplied LED ring and the newly installed gasket.



PIXLWAV