PINWOOFER

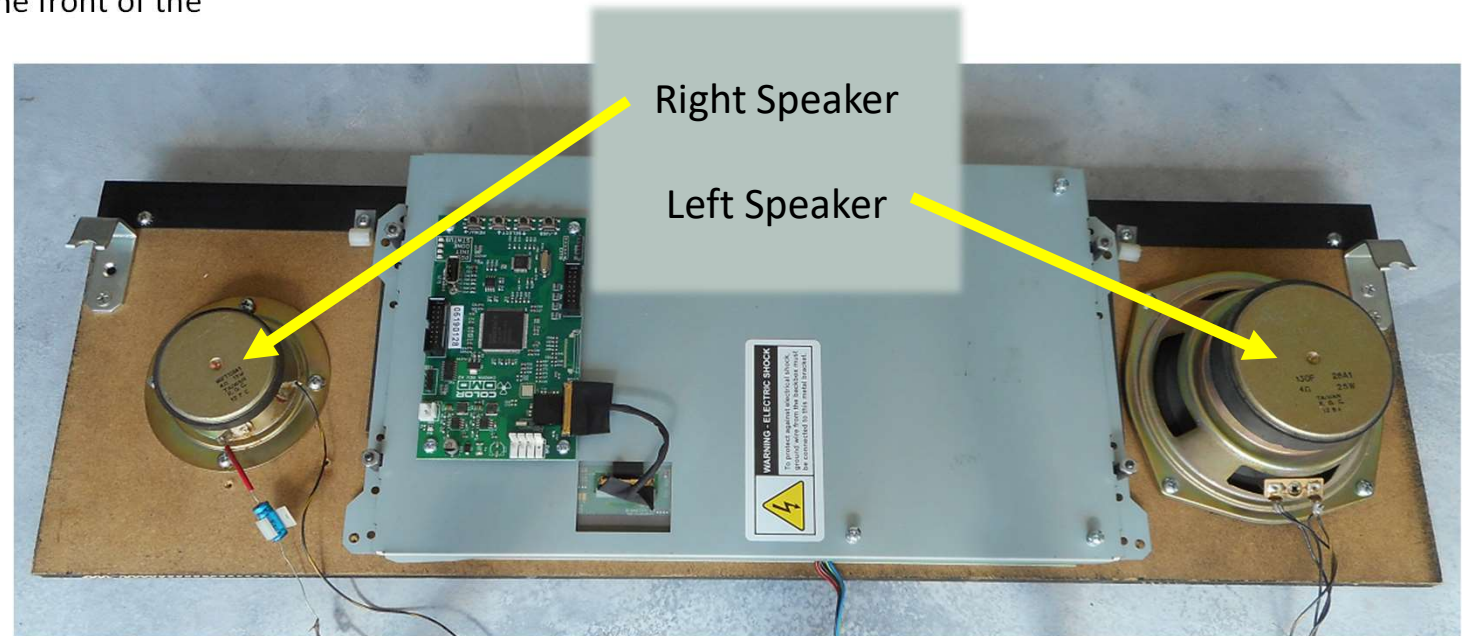Take your time, follow the instructions, relax, and enjoy yourself!

WARNINGS: Perform installation with your pinball machine turned off and unplugged from AC power.

PinWoofer WPC Backbox

Speaker Installation Instructions

WPC Speaker Panel

- A typical WPC Speaker Panel is shown below.

- Shown is the rear of the Speaker Panel.

- Left and Right Speaker designations are referenced as seen from the front of the Speaker Panel.

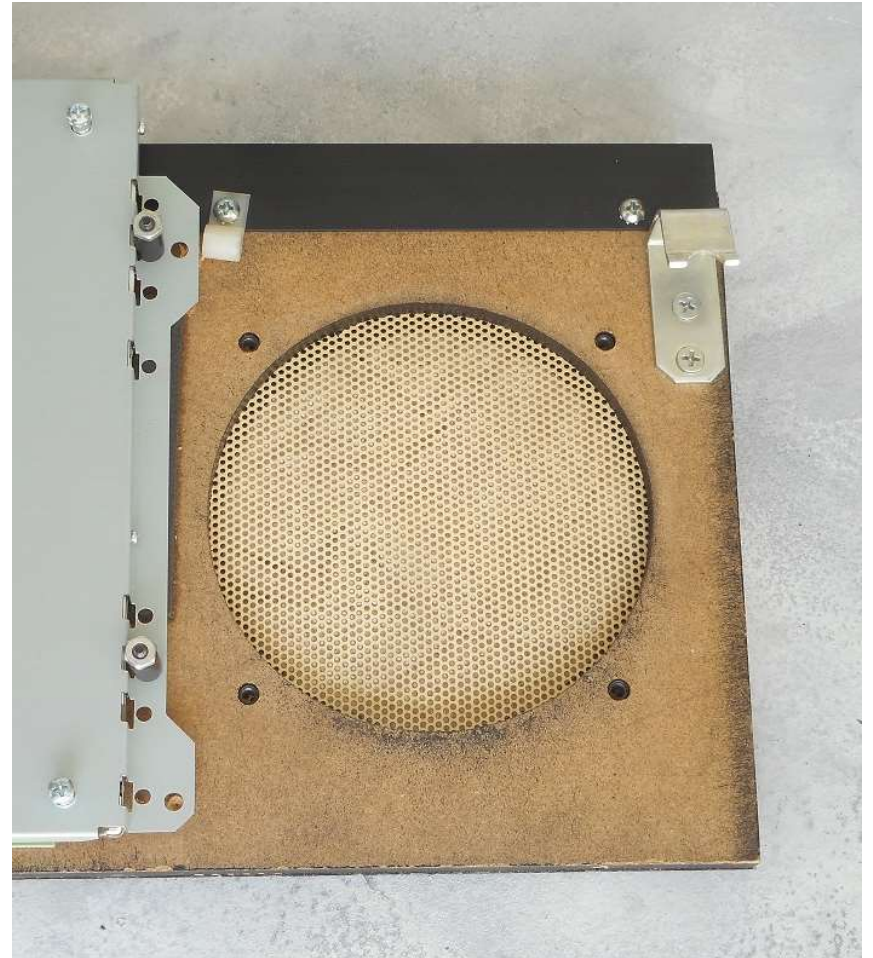Right Speaker

Left Speaker

PINWOOFER

Depopulate Factory Speakers

- Remove the factory speakers and set them aside.

Left-Side Speaker Mounting Location

- The left-side panel speaker mounting location is shown.
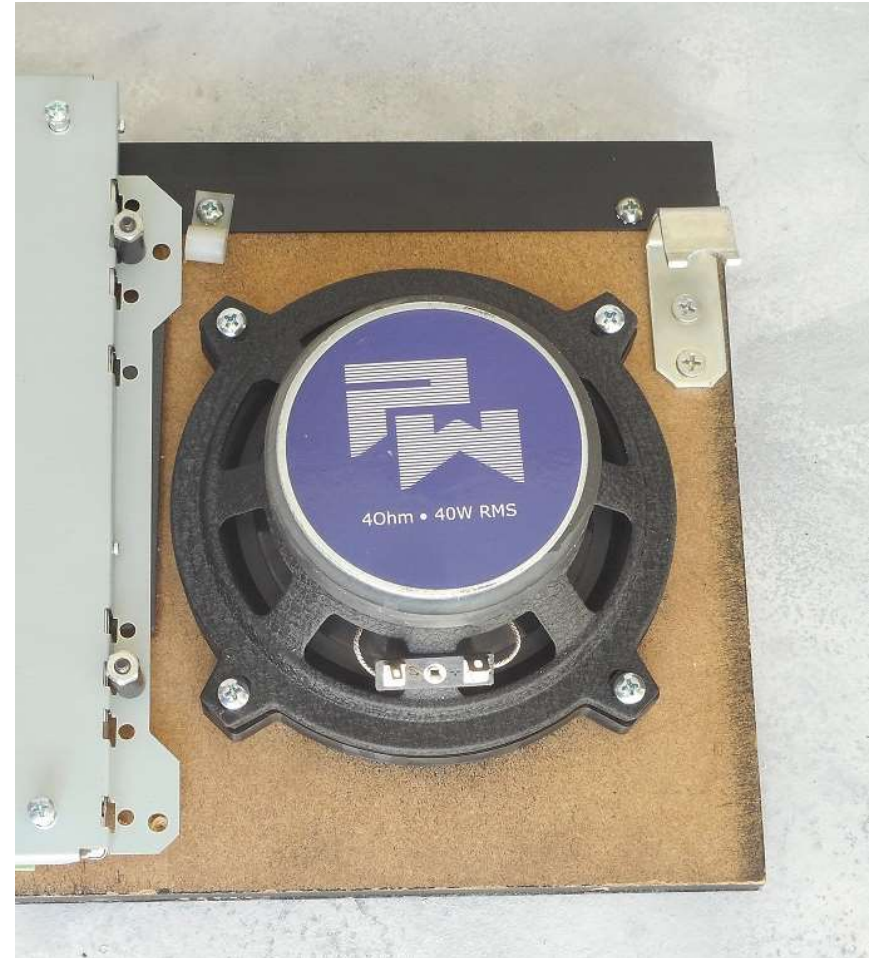

PINWOOFER

Place Left-Side Mounting Ring

- Rest the left-side mounting ring as shown.
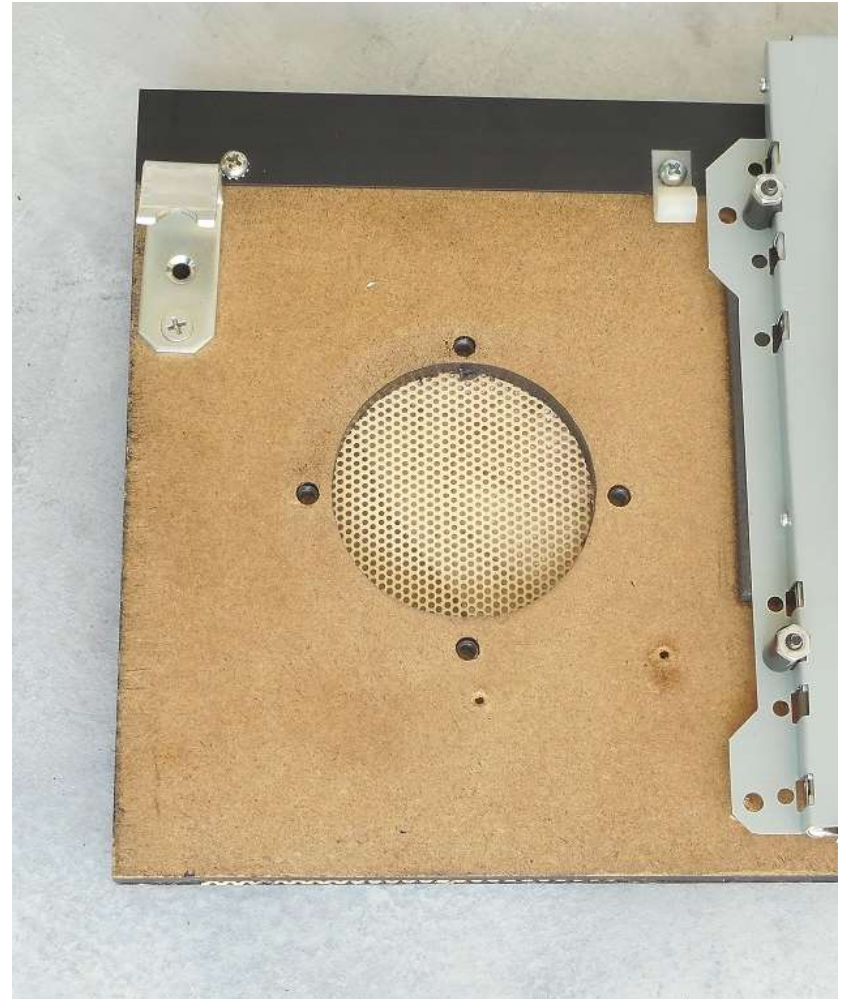
Populate Left-Side Speaker

- Mount your new PW label speaker as shown to the right.

- Use #8-32x1in pan head machine screws.

- Completely tighten, but do not over tighten.

PINWOOFER

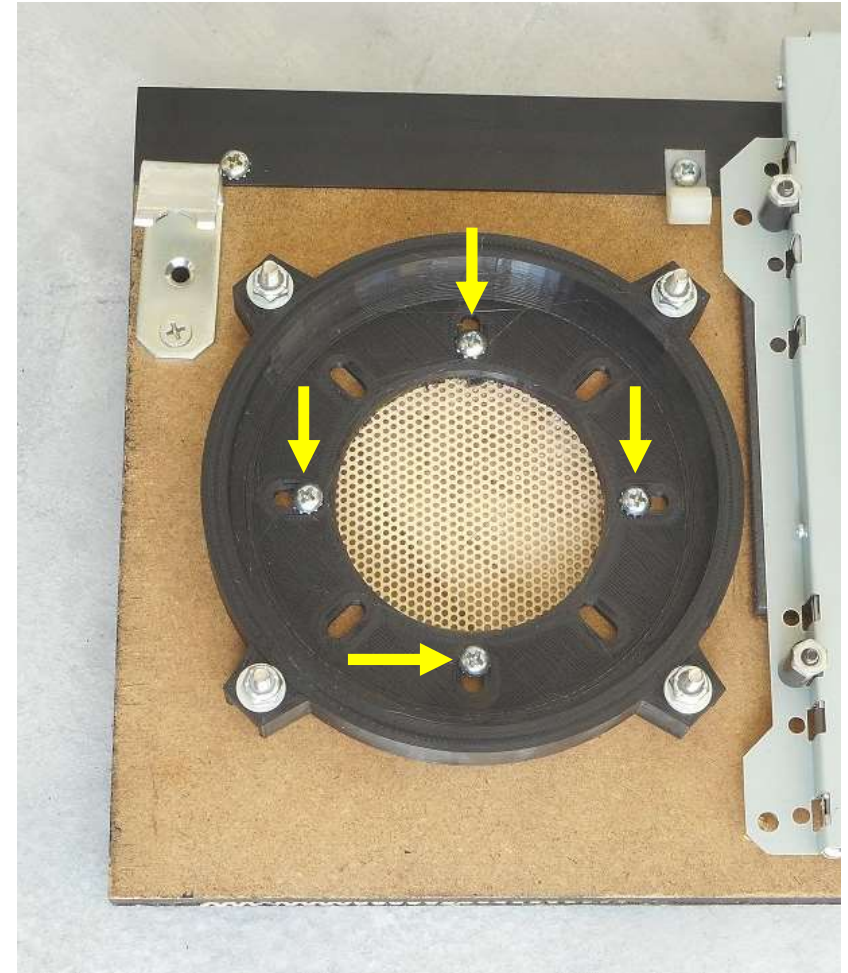# Right-Side Speaker Mounting Location

- The right-side panel speaker mounting location is shown.

PINWOOFER

Mount the Right-Side Speaker Interposer Ring

- Center the provided WPC Speaker Interposer on the mounting threads.

- Using the four #8-32x3/8in screws and four #8 flat washers, secure the ring at the mounting locations shown by the yellow arrows.

- Completely tighten, but do not over tighten.

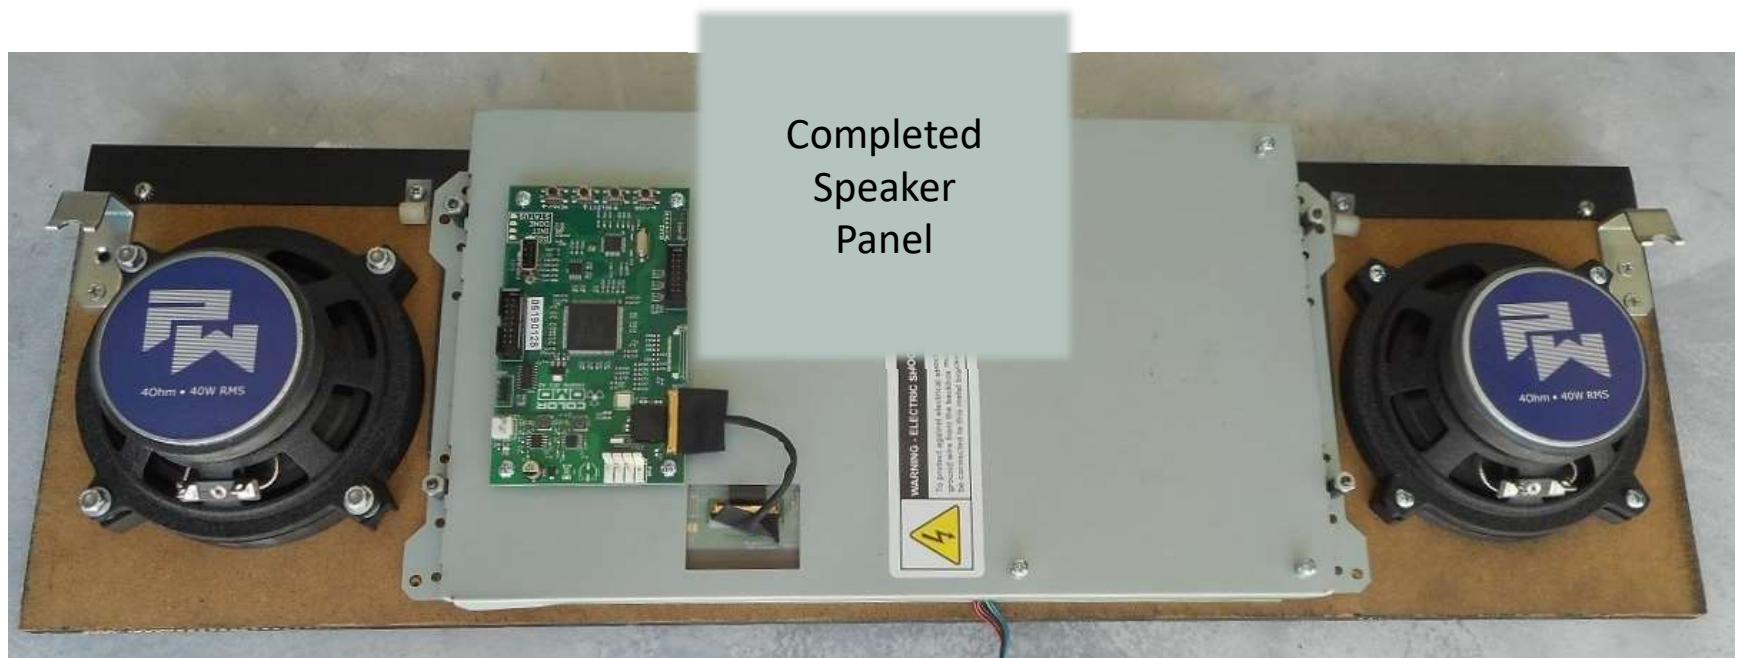PINWOOFER

Populate Right-Side Speaker

- Mount your new PW labeled speaker as shown to the right, using the provided four #8 Flat Washers and four #8-32 Nylon Locking Nuts.

- Completely tighten, but do not over tighten.

PINWOOFER

Completed Speaker Panel

- Shown below is a view of the back side of the speaker panel, with new PW Label Speakers mounted.

Completed Speaker Panel

PINWOOFER

End of Document